


PEUGEOT Connect Navigation

MULTIMEDIA AUDIO EQUIPMENT/BLUETOOTH TELEPHONE

GPS EUROPE BY SD CARD

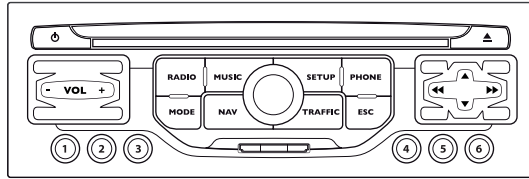

The PEUGEOT Connect Navigation is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.



For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the PEUGEOT Connect Navigation switches off following the activation of the Energy Economy mode.




Certain functions described in this handbook will become available during the year.

CONTENTS

- **01 First steps** p.244
- **02 Steering mounted controls** p.245
- **03 General operation** p.246
- **04 Navigation - Guidance** p.248
- **05 Traffic information** p.255
- **06 Radio** p.257
- **07 Music media players** p.258
- **08 Bluetooth telephone** p.261
- **09 Configuration** p.263
- **10 Trip computer/vehicle parameters** p.264
- **11 Screen menu map** p.265
- **Frequently asked questions** p.268

01 FIRST STEPS

PEUGEOT Connect Navigation CONTROL PANEL

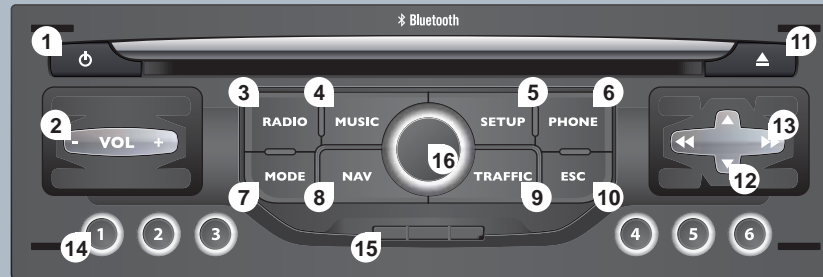

1. Engine not running
- Short press: on/off.
- Long press: CD pause, mute for the radio.
Engine running
- Short press: CD pause, mute for the radio.
- Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
- 3 - 4. Long press: access to the audio settings: front/rear and left/right balance, bass/treble, equalizer, loudness, automatic volume adjustment, initialise the settings.
5. Access to the "SETUP" Menu.
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" Menu.
Selection of the successive display of:
Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip Computer.
Long press: display of a black screen (DARK).
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.
12. Selection of the previous/next radio station from the list.
Selection of the previous/next CD.
Selection of the previous/next MP3 directory.
Selection of the previous/next page of a list.
13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.
14. Buttons 1 to 6:
Selection of the stored radio station.
Selection of the CD in the CD changer.
Long press: store the current radio station.
15. Reader for navigation SD card only.
16. Dial for selection of the screen display and according to the context of the menu.
Short press: contextual menu or confirmation.
Long press: specific contextual menu of the list displayed.

02 STEERING MOUNTED CONTROLS

RADIO: selection of the next stored station.
CD CHANGER: selection of the next CD.
Selection of the next entry in the address book.

RADIO: change to the next radio station on the list.
Long press: automatic search for a higher frequency.
CD/CD CHANGER: selection of the next track.
CD/CD CHANGER: continuous press: fast forward play.

Volume increase.

- Change the sound source.
- Make a call from the address book.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the address book.

Mute: by pressing the volume increase and decrease buttons simultaneously.

Restore the sound: by pressing one of the two volume buttons.

Volume decrease.

 
RADIO: selection of the previous stored station.
CD CHANGER: selection of the previous CD.
Selection of the previous entry in the address book.

RADIO: change to the previous radio station on the list.
Long press: automatic search for a lower frequency.
CD/CD CHANGER: selection of the previous track.
CD/CD CHANGER: continuous press: fast backward play.

03 GENERAL OPERATION

Press the MODE button several times in succession for access to the following menus:

RADIO/MUSIC MEDIA PLAYERS




TELEPHONE

(If a conversation is in progress)



TRIP COMPUTER

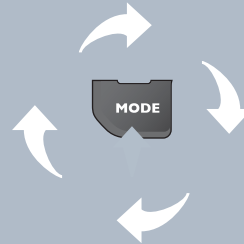

FULL SCREEN MAP



NAVIGATION

(If guidance is in progress)



SETUP:

system language*, date and time*, display, vehicle settings*, unit and system settings, "Demo mode".

* Available according to model.



TRAFFIC:

TMC information and messages.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

03 GENERAL OPERATION

DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

- 1 ABORT GUIDANCE
- 1 REPEAT ADVICE
- 1 BLOCK ROAD
- 1 ROUTE INFO
- 2 SHOW DESTINATION
- 2 TRIP INFO
- 3 Route type
- 3 Avoid
- 3 Satellites
- 1 ZOOM/SCROLL
- 1 VOICE ADVICE
- 1 ROUTE OPTIONS

TELEPHONE:

- 1 END CALL
- 1 HOLD CALL
- 1 DIAL
- 1 DTMF-TONES
- 1 PRIVATE MODE
- 1 MICRO OFF

MUSIC MEDIA PLAYERS:

- 1 TRAFFIC INFO (TA)
- 1 PLAY OPTIONS
- 2 NORMAL ORDER
- 2 RANDOM TRACK
- 2 REPEAT FOLDER
- 2 SCAN
- 1 SELECT MUSIC

RADIO:

- 1 IN FM MODE
- 2 TRAFFIC INFO (TA)
- 2 RDS
- 2 RADIOTEXT
- 2 REGIONAL PROG.
- 2 AM
- 1 IN AM MODE
- 2 TA
- 2 REFRESH AM LIST
- 2 FM

FULL SCREEN MAP:

- 1 ABORT GUIDANCE/RESUME GUIDANCE
- 1 SET DESTINATION
- 1 POIS NEARBY
- 1 POSITION INFO
- 1 MAP SETTINGS
- 1 ZOOM/SCROLL

04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

Insert the SD card in the front panel reader and leave it there to use the Navigation functions.
The navigation SD card data must not be modified.
Map data updates are available from PEUGEOT dealers.

1



Press the NAV button.

 


4



Select the "Address input" function and press the dial to confirm.

ADDRESS INPUT




The list of the last 20 destinations appears under the Navigation Menu function.

5



 Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.



2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



6



Select the letters of the town one by one confirming each time by pressing the dial.



3



Select the "Destination input" function and press the dial to confirm.

DESTINATION INPUT



A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

To clear a destination; from steps 1 to 3, select "Choose from last destinations". A long press on one of the destinations displays a list of actions from which you can select:

Delete entry
Delete list

7



Turn the dial and select OK.
Press the dial to confirm.



To speed up the process, the post code can be entered directly after selecting the "Postal code" function. Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street" and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press the dial to confirm the selection. PEUGEOT Connect Navigation allows up to 4 000 contact files to be recorded.

9



During guidance, pressing the end of the lighting stalk repeats the last guidance instruction.

 


10



Then select "Start route guidance" and the press the dial to confirm.

START ROUTE GUIDANCE



Select the route type: "Fast route", "Short route" or "Optimized route" and press the dial to confirm. It is also possible to select a destination via "Choose from address book" or "Choose from last destinations".

CHOOSE FROM ADDRESS BOOK

CHOOSE FROM LAST DESTINATIONS



 
You can zoom in/zoom out on the map using the dial. It is possible to scroll the map or select its orientation via the short-cut menu of the FULL SCREEN MAP. Press the dial then select "Map settings".

04 NAVIGATION - GUIDANCE


ROUTE OPTIONS

The route selected by the PEUGEOT Connect Navigation audio/telephone depends directly on the route options.
Changing these options may change the route completely.

1



Press the NAV button.

 

2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



3



Select the "Route options" function and press the dial to confirm.

ROUTE OPTIONS



4



Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.

ROUTE TYPE



5



Select the "Route dynamics" function. This function gives access to the "Traffic independent" or "Semi-dynamic" options.

ROUTE DYNAMICS

 


6



Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).

AVOIDANCE CRITERIA



7



Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.

RECALCULATE

 


04 NAVIGATION - GUIDANCE


ADDING A STOPOVER

Stoptovers can be added to the route once the destination has been selected.

1



Press the NAV button.

 


2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

 "NAVIGATION" MENU



3



Select the "Stoptovers" function and press the dial to confirm.

STOPOVERS



4



Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.

ADD STOPOVER



5



Enter a new address, for example.

ADDRESS INPUT



6



Once the new address has been entered, select OK and press the dial to confirm.

OK



7



Select "Recalculate" and press the dial to confirm.

RECALCULATE








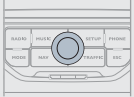

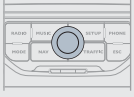






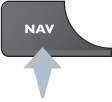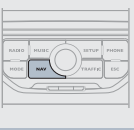


The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the PEUGEOT Connect Navigation will always return you to the previous stopover.

04 NAVIGATION - GUIDANCE

SEARCHING FOR POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1	 <p>Press the NAV button.</p>	
2	 <p>Press the NAV button again or select the Navigation Menu function and press the dial to confirm.</p> <p>NAVIGATION MENU</p>	
3	 <p>Select the "POI search" function and press the dial to confirm.</p> <p>POI SEARCH</p>	
4	 <p>Select the "POI nearby" function to search for POIs around the vehicle.</p> <p>POI NEARBY</p>	
5	 <p>Select the "POI near destination" function to search for POIs near the point of arrival of the route.</p> <p>POI NEAR DESTINATION</p>	

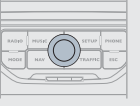


6	 <p>Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.</p> <p>POI IN CITY</p>	
 <p>A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.</p>		
7	 <p>Select the "POI in country" function to search for POIs in the country required.</p> <p>POI IN COUNTRY</p>	
8	 <p>Select the "POI near route" function to search for POIs near the route.</p> <p>POI NEAR ROUTE</p>	














04 NAVIGATION - GUIDANCE














LIST OF PRINCIPAL POINTS OF INTEREST (POI)



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

-  Service station
-  LPG station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Refreshment area
-  Picnic area
-  Cafeteria

-  Airport
-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Tennis court
-  Swimming pool
-  Golf course
-  Winter sports resort
-  Theatre

-  Cinema
-  Camp site
-  Theme parks
-  Hospital
-  Pharmacy
-  Police station
-  School
-  Post office
-  Museum
-  Tourist information
-  Automatic speed camera*
-  Red light camera*
-  Risk area*

* According to availability in the country.

 
04 NAVIGATION - GUIDANCE

NAVIGATION SETTINGS

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press the dial to confirm.

NAVIGATION MENU



3



Select the "Settings" function and press the dial to confirm.

SETTINGS



4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

NAVI VOLUME



The volume of the Risk Areas POIs alert can only be adjusted during this type of alert.

5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI CATEGORIES ON MAP



6



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

SET PARAMETERS FOR RISK AREAS



UPDATING THE RISK AREAS POIs

This requires an SDHC (High Capacity) compatible reader.

Download the update file from the Internet

(www.peugeot.fr or www.peugeot.co.uk).

 
Open this file and copy the extracted documents to the DATABASE folder on the SD card, replacing the existing files.


05 TRAFFIC INFORMATION


CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map. The navigation system can then suggest an alternative route to avoid a traffic problem.


1  Press the TRAFFIC button.



 The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2  Press the TRAFFIC button again or select the Traffic Menu function and press the dial to confirm.




 
3  Select the filter of your choice:


- MESSAGES ON ROUTE
- ALL WARNING MESSAGES
- ONLY WARNINGS ON ROUTE
- ALL MESSAGES

 
The messages appear on the map and on the list.
To exit, press ESC.



4  Select the "Geo. Filter" function and press the dial to confirm.



5  Then select the radius of the filter in miles (km) required in accordance with the route, press the dial to confirm. When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographical filter follows the movement of the vehicle.



! The filters are independent and their results are cumulative. We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow/ice

2 Red and yellow triangle: traffic information, par example:



Modified signage



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger



No entry



Traffic jam

RECEIVING TA MESSAGES

 
i

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, Jukebox, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1




With the current audio source displayed on the screen, press the dial.



2

 The shortcut menu for the source appears and gives access to:



3



Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.



06 RADIO

The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

SELECTING A STATION

 
1




Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.




While listening to the radio, press one of the buttons to select the previous or next station on the list.



 A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.



 Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.



RDS - REGIONAL MODE

1




When the current radio station is displayed on the screen, press the dial.



2

The radio source short-cuts menu appears and provides access to the following short-cuts:

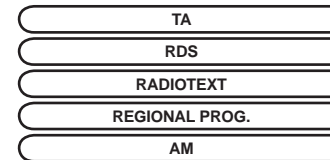

3



Select the function required and press the dial to confirm to gain access to the corresponding settings.



RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



The PEUGEOT Connect Navigation will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps. It also supports the VBR (Variable Bit Rate) mode. No other type of file (.mp4, .m3u...) can be played.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.
If the disc is recorded in another format it may not be played correctly.
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet standard is recommended.



It is advisable to restrict file names to 20 characters, without using special characters (e.g.: " " ? ; ù) to avoid any play or display problems.

 
07 MUSIC MEDIA PLAYERS

SELECTING/PLAYING MUSIC CD, MP3/WMA CD

1



Press the MUSIC button.



4



Select the music source required:
CD, MP3/WMA CD. Press the dial to
confirm. Play begins.



!

The list of tracks or MP3/WMA files appears under "Music" Menu.

2



Press the MUSIC button again or
select the "Music" Menu function and
press the dial to confirm.

 
"MUSIC" MENU



5




Press the up or down button to select
the next/previous folder.



6



 Press one of the buttons to select a
music track.
Press and hold one of the buttons for
fast forward or rewind play.



3



Select the "Select music" function and
press the dial to confirm.

SELECT MUSIC



The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the settings used. We recommend the ISO 9660 file standard.

07 MUSIC MEDIA PLAYERS

USING THE EXTERNAL INPUT (AUX) JACK/USB AUDIO CABLE NOT SUPPLIED


- 1 Connect the portable equipment (MP3/WMA player...) to the JACK audio socket or to the USB port, using a suitable audio cable.



- 2 Press the MUSIC button then press it again or select the Music Menu function and press the dial to confirm.




MUSIC MENU

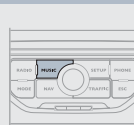

- 3 Select the "External device" function and press the dial to activate it.



 EXTERNAL DEVICE



- 4 Select the AUX music source and press the dial to confirm. Play begins automatically.



! The display and management of the controls is via the portable equipment.

CD CHANGER PLAYING A CD (NOT MP3/WMA COMPATIBLE)

 
- 1 Insert one or more CDs in the changer. Press the MUSIC button.



- 2 Press the MUSIC button again or select the Music Menu function and press the dial to confirm.




MUSIC MENU



- 3 Select the "Select music" function and press the dial to confirm.



 SELECT MUSIC



- 4 Select the "CD Changer" music source and press the dial to confirm.



CD CHANGER



- 5 Press one of the buttons on the numeric keypad to select the corresponding CD.



08 BLUETOOTH TELEPHONE




CONNECTING A TELEPHONE

 
* The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you. A list of mobile telephones with the best level of compatibility is available from the dealer network.

! For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the PEUGEOT Connect Navigation must be carried out with the vehicle stationary. The ignition must be on.


1 Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2  Press the PHONE button.




The list of telephones connected previously (4 maximum) appears on the multifunction screen. Select the telephone required for a new connection.

3  For a first connection, select "Search phone" and press the dial to confirm. Then select the name of the telephone.


SEARCH PHONE




4  Enter the authentication code on the telephone. The code to be entered is displayed on the screen.



i Once the telephone has been connected, PEUGEOT Connect Navigation can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1  To change the telephone connected, press the PHONE button, then select Phone Menu and press the dial to confirm.



2  Select "Connect phone". Select the telephone and press to confirm.

CONNECT PHONE



08 BLUETOOTH TELEPHONE

RECEIVING A CALL

1 An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2 Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.



 
YES NO



3 To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.




END CALL




Press the end of the steering mounted control to accept the call or end the call in progress.

MAKING A CALL

 1  Press the PHONE button.



 The list of the last 20 calls made and received in the vehicle appears under "Phone" Menu. You can select a number and press the dial to make the call.

2 Select the "Phone" Menu function and press the dial to confirm.





"PHONE" MENU

Select "Dial number", then dial the telephone number using the virtual keypad.

DIAL NUMBER



 It is also possible to select a number from the address book. You can select "Dial from address book". The PEUGEOT Connect Navigation can record up to 4 000 entries. Press the end of the steering mounted control for more than two seconds to gain access to the address book.


 To delete a number, press the PHONE button then press and hold on a call number to display a list of actions including:
Delete entry
Delete list

 
09 CONFIGURATION


SETTING THE DATE AND TIME

The SETUP function gives access to the following options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.

! These settings must be re-entered if the battery has been disconnected.


1  Press the SET UP button.



2  Select the "Date & Time" function and press the dial to confirm.


DATE & TIME




3  Select the "Set date & time" function and press the dial to confirm.

SET DATE & TIME




4  Set the parameters one by one using the direction arrows and confirm by means of the dial.




5  Select the "Date format" function and press the dial to confirm.



6  Confirm the format required using the dial. Select the "Time format" function and press the dial to confirm.



 Confirm the format required using the dial. Pressing the SET UP button for more than 2 seconds gives access to:

- DESCRIPTION OF THE UNIT**
- GPS COVERAGE**
- DEMO MODE**

10 TRIP COMPUTER/VEHICLE PARAMETERS

TRIP COMPUTER

1

Press the MAIN button or press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.



Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

A FEW DEFINITIONS

i

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed.

After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

11 SCREEN MENU MAP



- 1 MAIN FUNCTION
- 2 CHOICE A
 - 3 choice A1
 - 3 choice A2
- 2 CHOICE B...



- 1 "TRAFFIC" MENU
 - 2 MESSAGES ON ROUTE
 - 2 ONLY WARNINGS ON ROUTE
 - 2 ALL WARNING MESSAGES
 - 2 ALL MESSAGES
 - 2 GEO. FILTER
 - 3 Within 2 miles (3 km)
 - 3 Within 3 miles (5 km)
 - 3 Within 6 miles (10 km)
 - 3 Within 30 miles (50 km)
 - 3 Within 60 miles (100 km)



- 1 "MUSIC" MENU
 - 2 SELECT MUSIC
 - 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
 - 3 Speed dependent volume
 - 3 Reset sound settings



- 1 "RADIO" MENU
 - 2 WAVEBAND
 - 3 FM
 - 3 AM
 - 2 MANUAL TUNE
 - 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
 - 3 Speed dependent volume
 - 3 Reset sound settings



1 "NAVIGATION" MENU

2 ABORT GUIDANCE/RESUME GUIDANCE

2 DESTINATION INPUT

3 Address input

4 Country

4 City

4 Street

4 House number

4 Start route guidance

4 Postal code

4 Save to address book

4 Intersection

4 City district

4 Geo position

4 MAP

3 Navigate HOME

3 Choose from address book

3 Choose from last destinations

3 TMC station information

2 STOPOVERS

3 Add stopover

4 Address input

4 Navigate HOME

4 Choose from address book

4 Choose from last destinations

3 Rearrange route

3 Replace stopover

3 Delete stopover

3 Recalculate

4 Fast route

4 Short route

4 Optimized route

2 POI SEARCH

3 POI nearby

3 POI near destination

3 POI in city

3 POI in country

3 POI near route

2 ROUTE OPTIONS

3 Route type

4 Fast route

4 Short route

4 Optimized route

3 Route dynamics

4 Traffic independent

4 Semi-dynamic

3 Avoidance criteria

4 Avoid motorways

4 Avoid toll roads

4 Avoid ferries

3 Recalculate

2 SETTINGS

3 Navi volume

3 POI categories on MAP

3 Set parameters for risk areas

4 Display on MAP

4 Visual alert

4 Sound alert



1 "PHONE" MENU

- 2 DIAL NUMBER
- 2 DIAL FROM ADDRESS BOOK
- 2 CALL LISTS
- 2 CONNECT PHONE
 - 3 Search phone
 - 3 Phones connected
 - 4 Disconnect phone
 - 4 Rename phone
 - 4 Delete pairing
 - 4 Delete all pairings
 - 4 Show details
- 2 SETTINGS
 - 3 Select ring tone
 - 3 Phone/Ring tone volume
 - 3 Enter mailbox number

* Available according to model.



1 "SETUP" MENU

- 2 SYSTEM LANGUAGE*
 - 3 Deutsch
 - 3 English
 - 3 Español
 - 3 Français
 - 3 Italiano
 - 3 Nederlands
 - 3 Polski
 - 3 Portuguese
- 2 DATE & TIME*
 - 3 Set date & time
 - 3 Date format
 - 3 Time format
- 2 DISPLAY
 - 3 Brightness
 - 3 Colour
 - 4 Pop titanium
 - 4 Toffee
 - 4 Blue steel
 - 4 Technogrey

- 4 Dark blue
- 3 MAP colour
 - 4 Day mode for MAP
 - 4 Night mode for MAP
 - 4 Auto. Day/Night for MAP
- 2 VEHICLE*
 - 3 Vehicle information
 - 4 Alert log
 - 4 Status of functions
- 2 UNITS
 - 3 Temperature
 - 4 Celsius
 - 4 Fahrenheit
 - 3 Metric/Imperial
 - 4 Kilometres (Consumption: l/100)
 - 4 Kilometres (Consumption: km/l)
 - 4 Miles (Consumption: MPG)
- 2 SYSTEM
 - 3 Factory reset
 - 3 Software version
 - 3 Automatic scrolling

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the Linear musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the Audio section. - The audio equipment's CD player does not play DVDs. - Because of their quality level, certain writeable CDs will not be played by the audio system.
<p>The CD player sound is poor.</p>	<p>The CD used is scratched or of poor quality.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p>
	<p>The audio equipment settings (bass, treble, ambiances) are unsuitable.</p>	<p>Set the treble or bass level to 0, without selecting an ambience.</p>



QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...)	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.



QUESTION	ANSWER	SOLUTION
The TA box is ticked. However, certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The time taken to calculate a route sometimes seems longer than usual.	The performance of the system may slow down temporarily if a CD is being copied onto the Jukebox at the same time as a route is being calculated.	Wait until the CD has been copied or stop the copying before starting the guidance function.
I receive a speed camera alert for a camera which is not on my route.	The system announces all speed cameras located in a conical zone forward of the vehicle. It may detect speed cameras on nearby or parallel roads.	Zoom the map to view the exact position of the speed camera.
The audible speed camera alert is not working.	Audible alerts are not active.	Activate audible alerts in Navigation Menu, Settings, Set parameters for risk areas.
	The alert volume level is set to minimum.	Increase the speed camera alert volume.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 3 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 3 satellites (long press on the SETUP button, then select GPS coverage).
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.
The route is not calculated successfully.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a motorway with tolls).	Check the exclusion criteria.

QUESTION	ANSWER	SOLUTION
There is a long waiting time after inserting a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.).	This may take a few seconds. This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be deactivated or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is activated. - Check that your telephone is visible.
A telephone connected by Bluetooth is inaudible.	The volume level depends on both the system and the telephone.	Increase the PEUGEOT Connect Navigation volume setting, possibly to maximum, and increase the telephone volume level if necessary.